




### Stampede Series Arrowhead Air Cleaner Instructions

1. Remove factory air cleaner and factory intake from frame Shown in picture A
2. Remove throttle body and install new bracket using the bolts supplied Shown in picture B Apply silicone to ensure the seal between each side of the bracket. Use blue Locktite on the bolts Shown in picture C
3. Install factory O ring into our backing plate Shown in picture D Install backing plate and slide breather tube into our backing plate. Use blue Locktite on the bolts
4. Insert air filter in cover and using the 3 bolts supplied to you install the cover. Use blue Locktite on the bolts Shown in picture E



A.

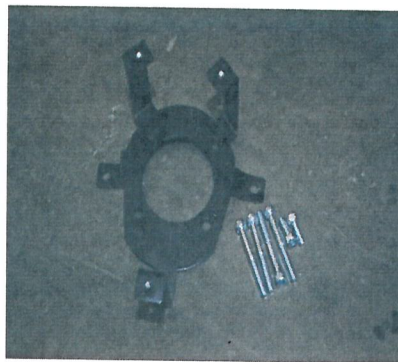


B.



C.



D.

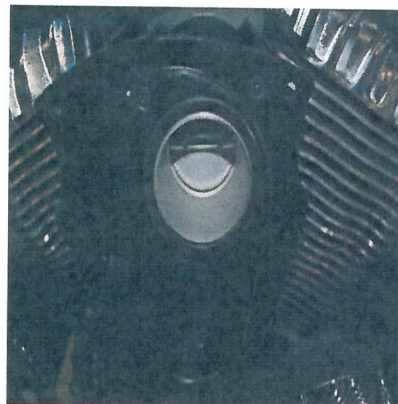

E.



F.

**NOTE: USE BLUE LOCKTITE ON ALL HARDWARE**